




2110682

24" x 5" Dakota Drawer Kit


DRAWER FRONT SOLD SEPARATELY

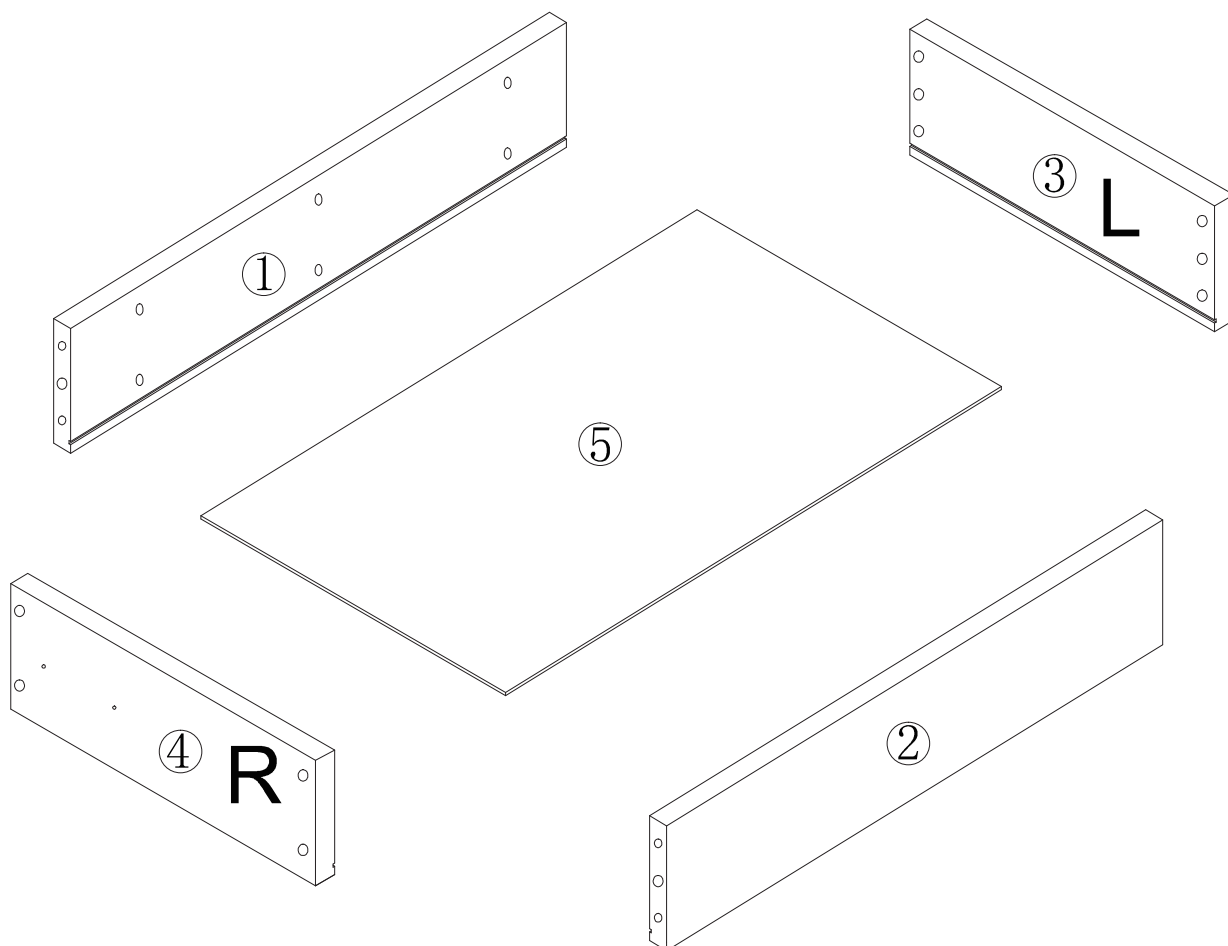

Ax8



Bx4

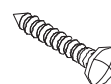


Cx6



Dx4




Ex8

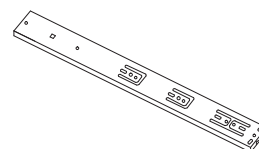


Fx2


Step 1

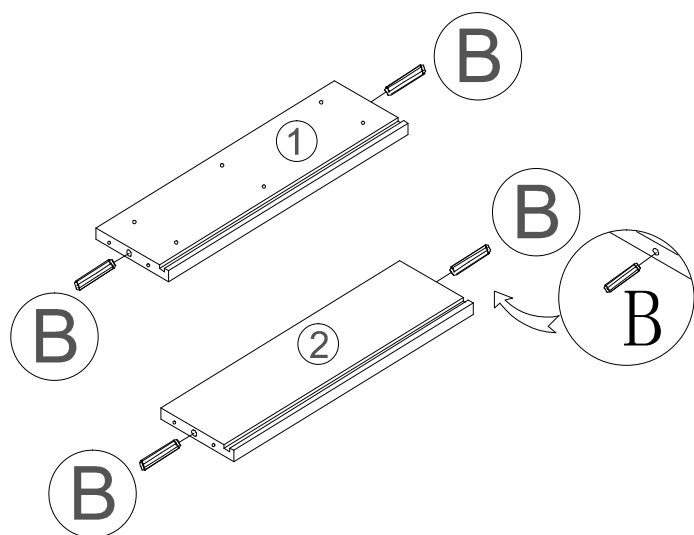


Step 2

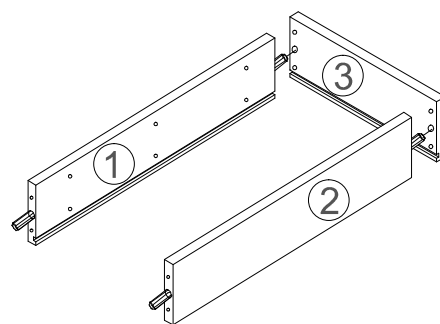


Step 3

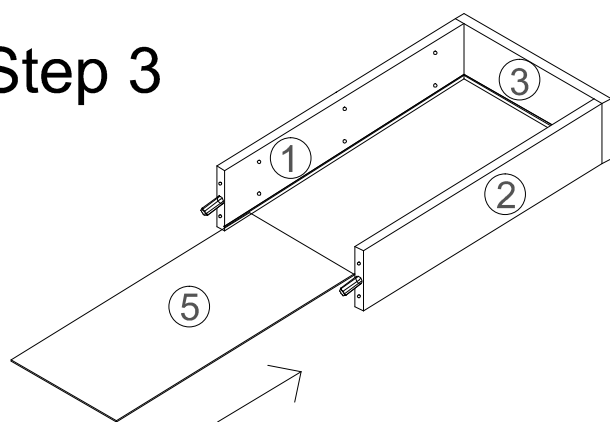


Step 4

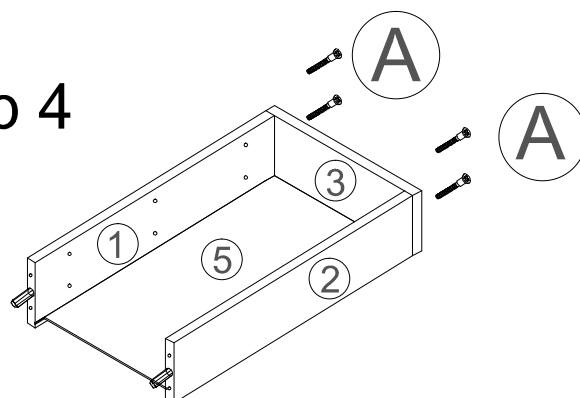


Step 5

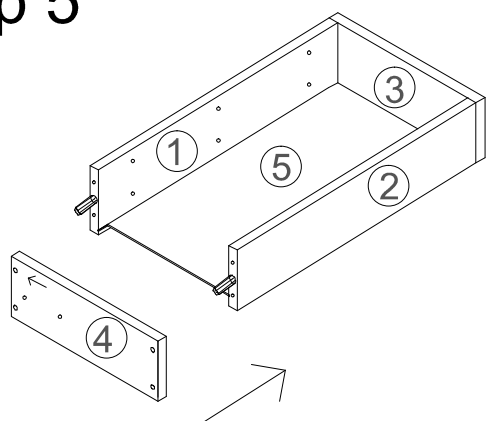


Step 6

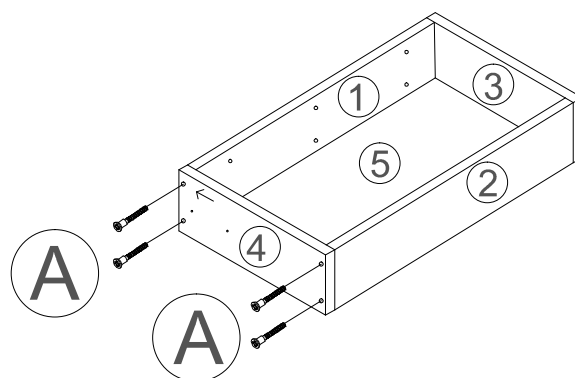


Step 7

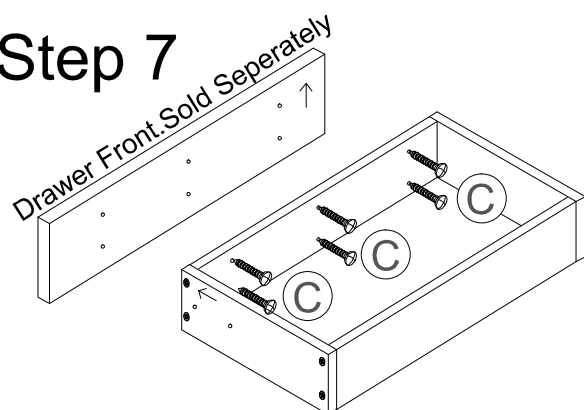


Step 8

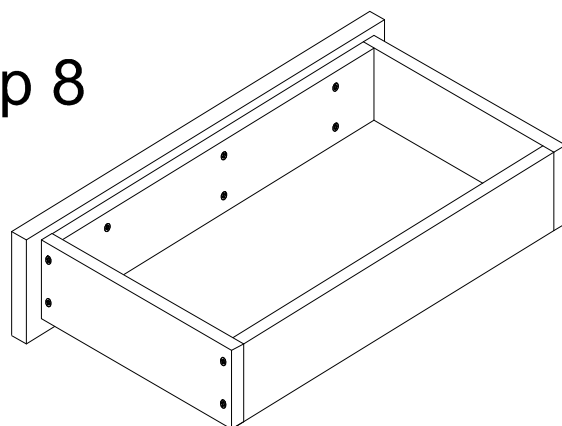


Step 9

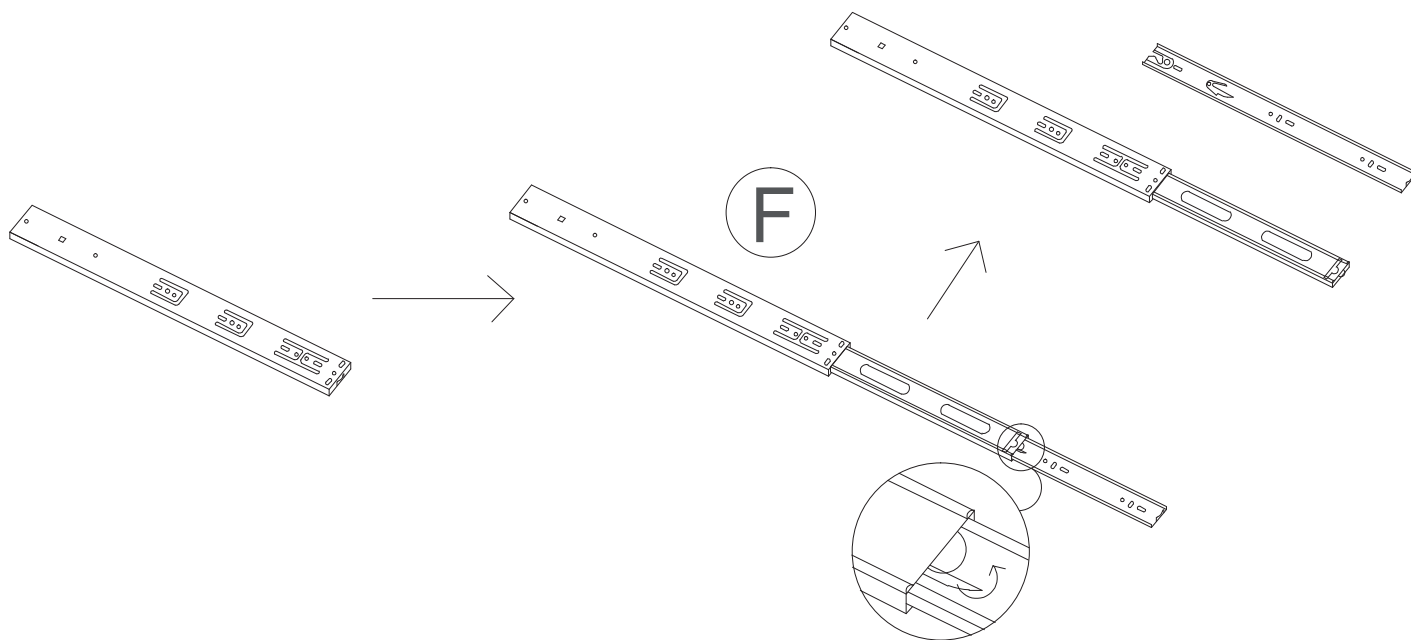

Step 10

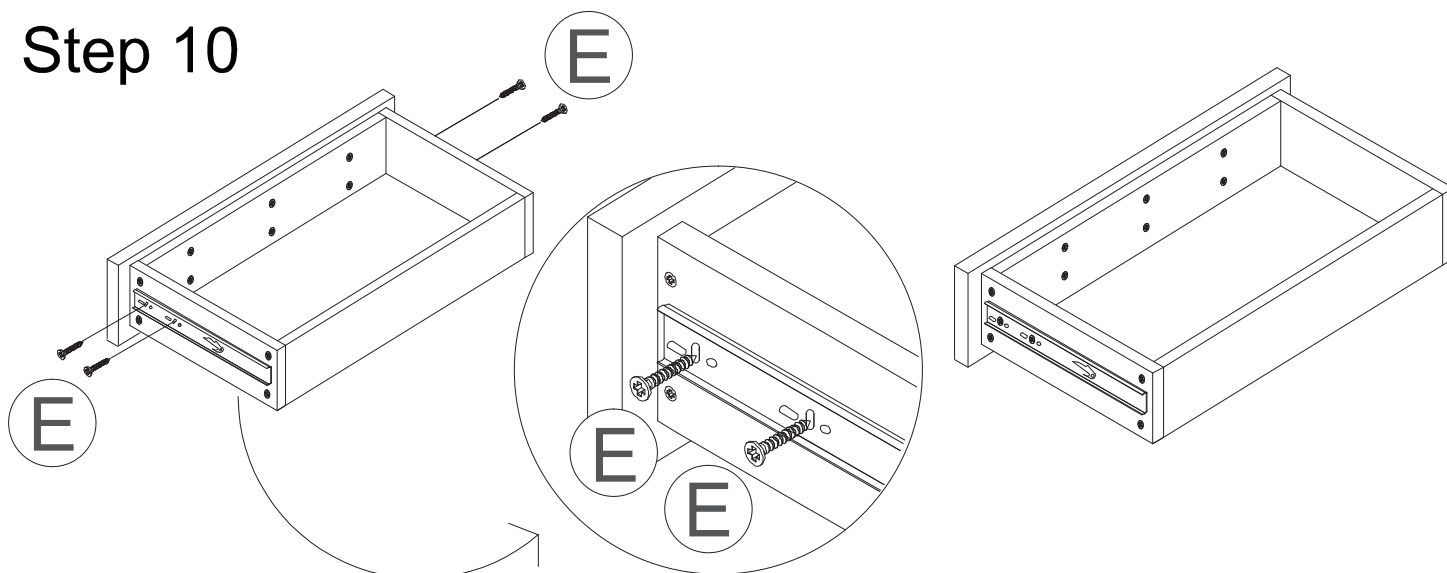


Step 11

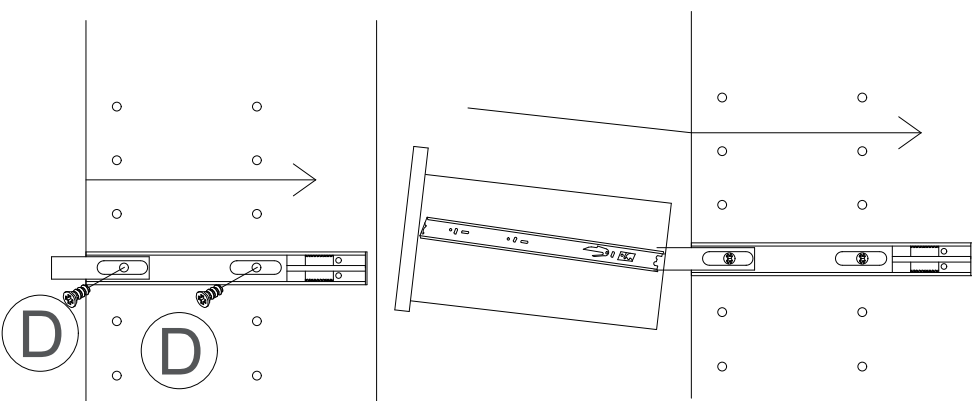

DRAWER SPACING


[illegible]

Step 12

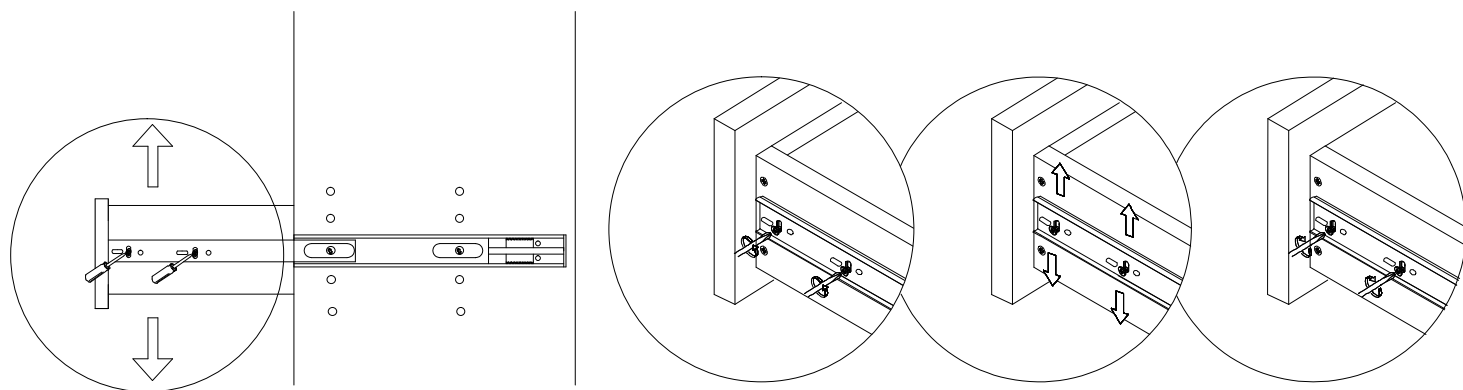


Adjust above two screws to make drawer level

Step 13

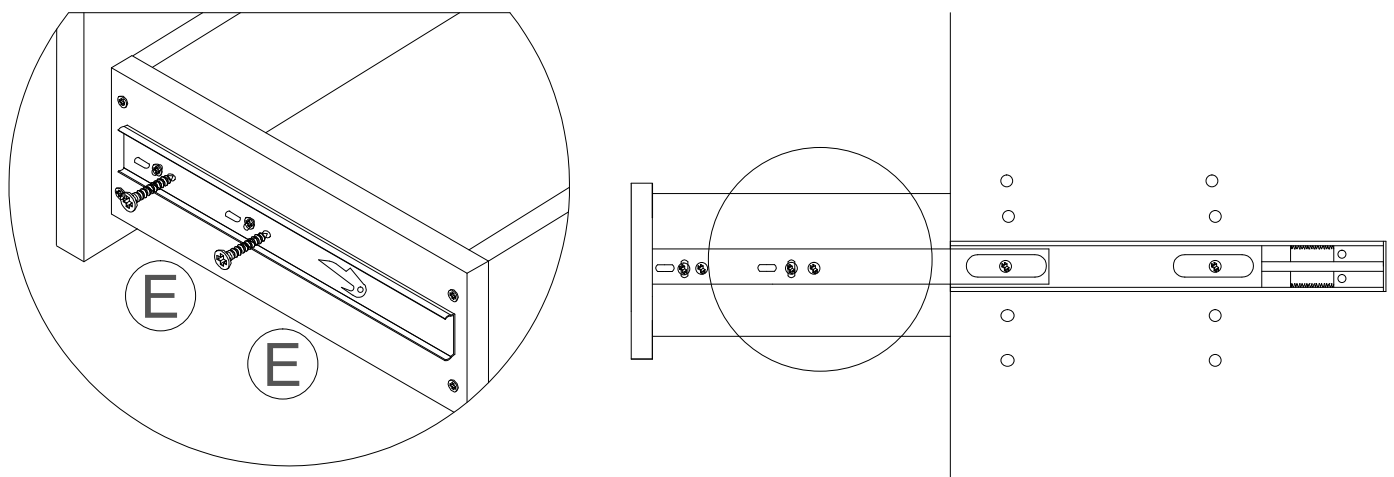

After the drawer is level,
then install two screw "E" to further fix the slide

Step 14

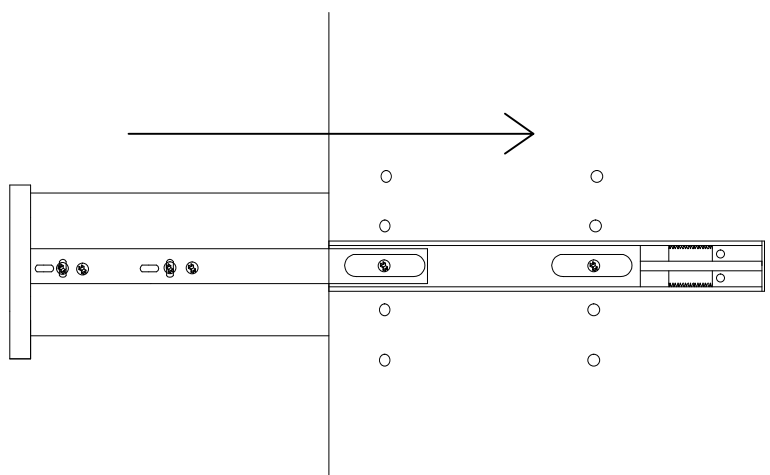


Top Edge of Drawer



Top Edge of Drawer

Top Edge of Drawer

5" DRAWER HOLE LOCATION

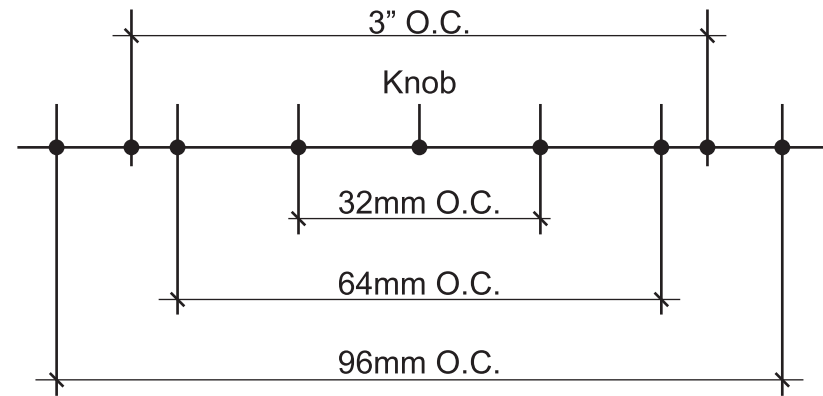

10" DRAWER HOLE LOCATION

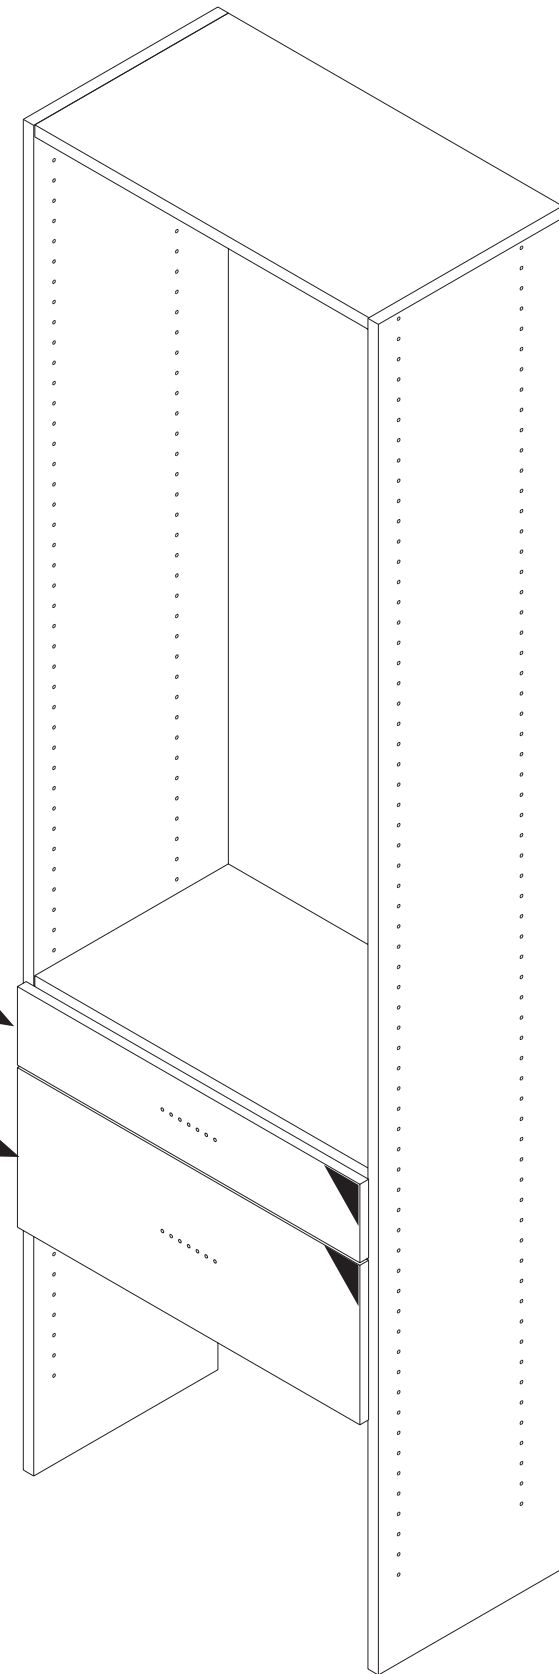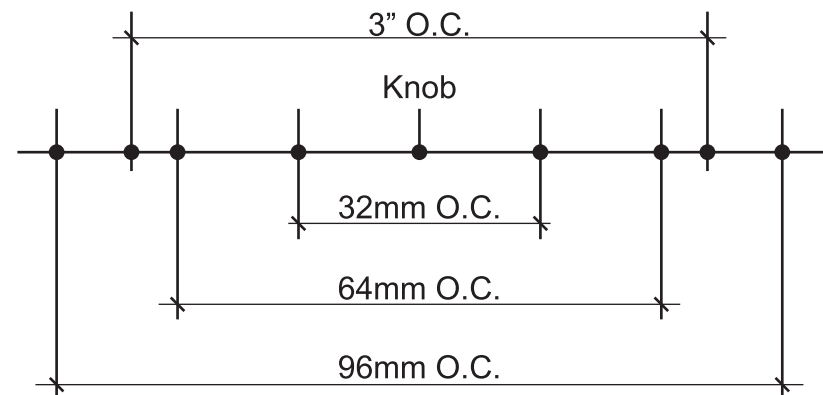

DRAWER TEMPLATE

IMPORTANT:

Use the black indicator for proper placement of the template onto your drawer. See illustration below.

INSTRUCTIONS

1. Tape this template to upper right hand corner of drawer (see illustration for orientation).
2. Using this template, drill hole(s) according to the knobs and pulls you would like to install (knobs and pulls sold separately).
3. Install and enjoy!

TOOLS NEEDED:

1. Drill
2. Drill Bit (3/16" or 5mm)
3. This template

Right
Edge