



9 CUBE ORGANIZER ASSEMBLY

PLEASE READ FIRST: This product is designed for quick & easy assembly. The connectors included are designed to expand as components are pressed together. This connection is permanent and care should be taken to verify proper alignment of components prior to assembly. Scan the QR code or visit us at midwestmanufacturing.com/cube for assembly videos, instructions and more.





TOOLS REQUIRED

- Hammer
- Screw Driver / Drill
- Rubber Mallet / Dead Blow Hammer




WARNING: All units must be secured to the wall using the hardware provided. Failure to do so may create an unsafe tipping hazard that could lead to injury or damage to personal belongings.


COMPONENTS: Prior to assembly, please verify all parts listed are present. For assembly or other product questions, please contact us at dpguestservice@dakotapanel.com.

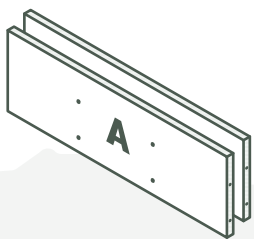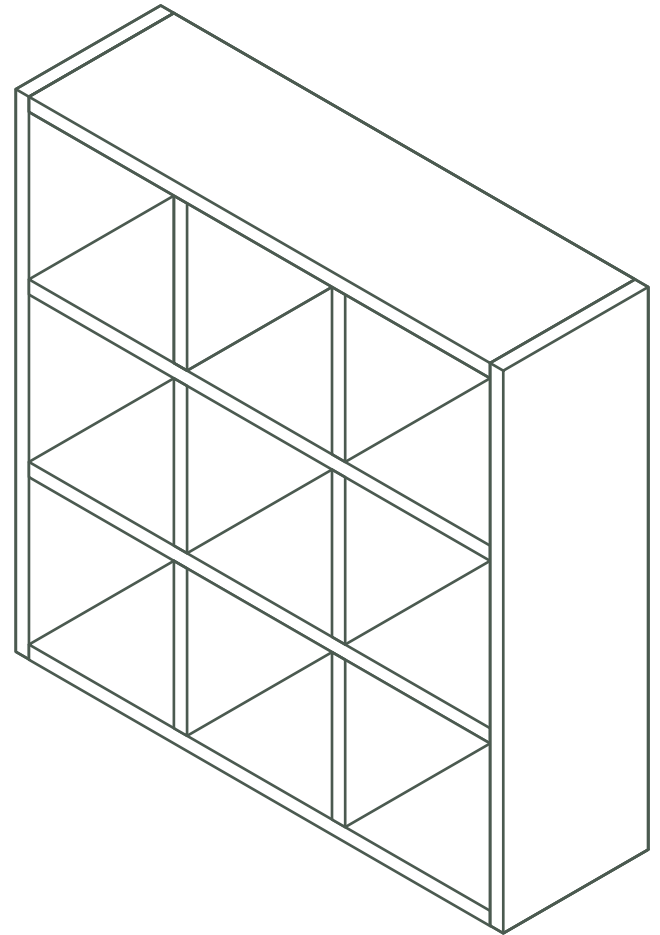


Top/Bottom Panel (A)
Qty: 2

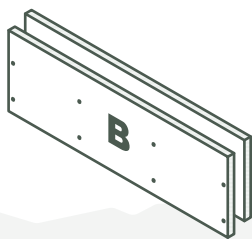


Side Panel (B)
Qty: 2

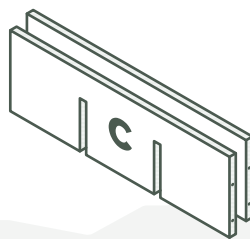

Fixed Shelves (C)
Qty: 2

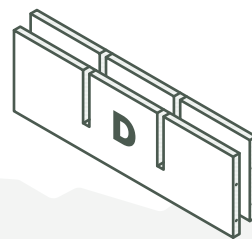

Vertical Dividers (D)
Qty: 2

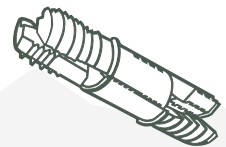

Connectors
Qty: 24



Back Panel
Qty: 5



Nails
Qty: 60



Anti-Tip Bracket
Qty: 2




2" Screw
Qty: 1




Zip Tie
Qty: 1




5/8" Screw
Qty: 1

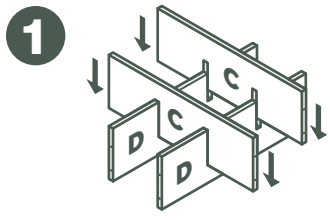


1 Interlock Fixed Shelves (C) into Vertical Dividers (D)

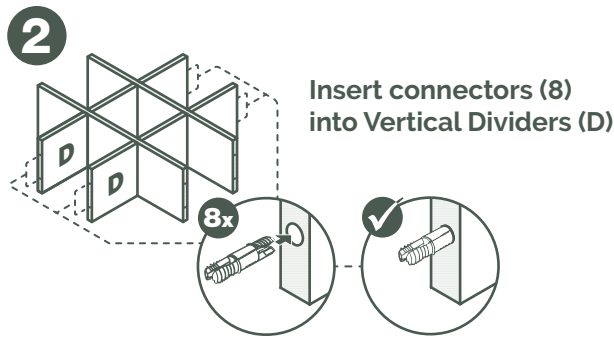


2 Insert connectors (8) into Vertical Dividers (D)

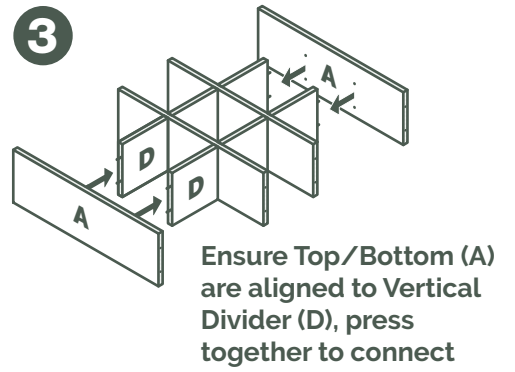


3 Ensure Top/Bottom (A) are aligned to Vertical Divider (D), press together to connect

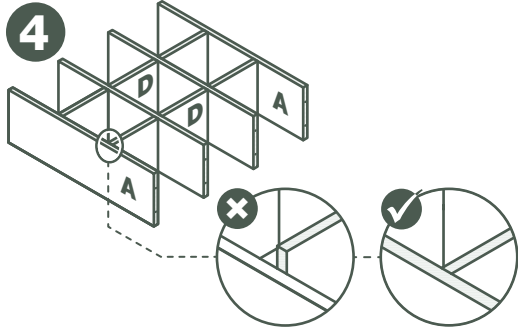


4 Ensure Top/Bottom Panels (A) are aligned properly prior to securing to Vertical Divider (D). Connect Top/Bottom Panels (A) using a rubber mallet/dead blow hammer. Verify connectors are aligned to the holes of Top/Bottom Panels (A) as the connection is made. Failure to align connectors may damage and/or weaken the connection.

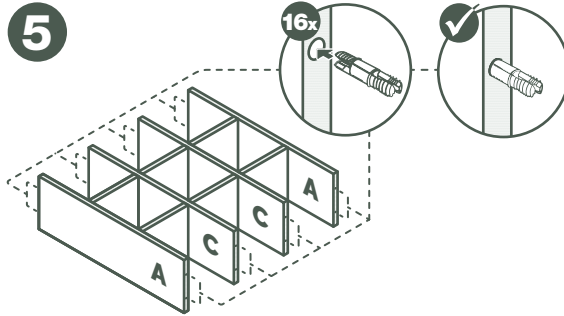


5 Insert connectors (16) into holes of Top/Bottom (A) and Fixed Shelves (C)

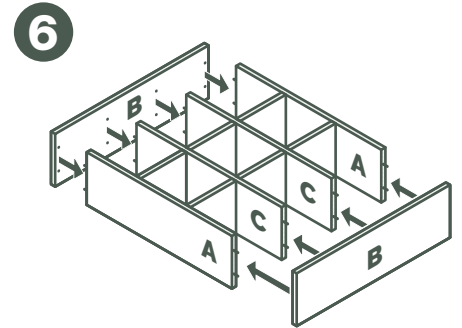


6 Align holes of Side Panels (B) with the inserted connectors in Top/Bottom (A) and Fixed Shelves (C)

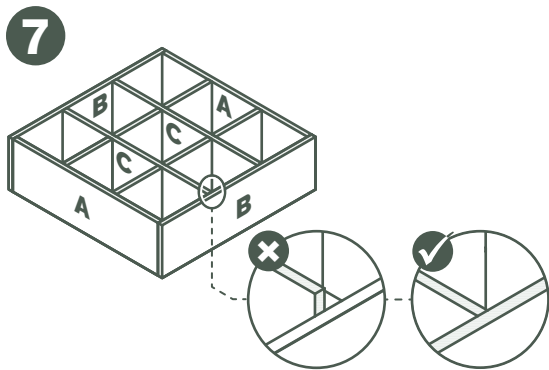

7 Ensure Side Panels (B) are aligned properly prior to securing to Top/Bottom (A) and Fixed Shelves (C). Connect Side Panels (B) using a rubber mallet/dead blow hammer. Verify connectors are aligned to the holes of Side Panels (B) as the connection is made. Failure to align connectors may damage and/or weaken the connection.

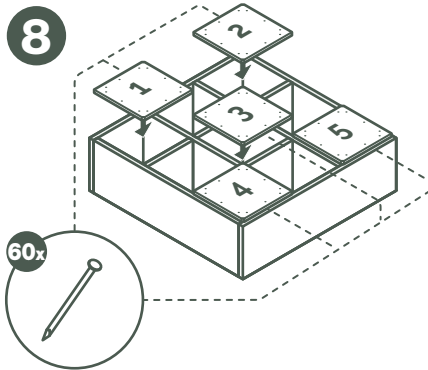

8 Use a hammer to fasten Back Panels to the organizer with the included nails

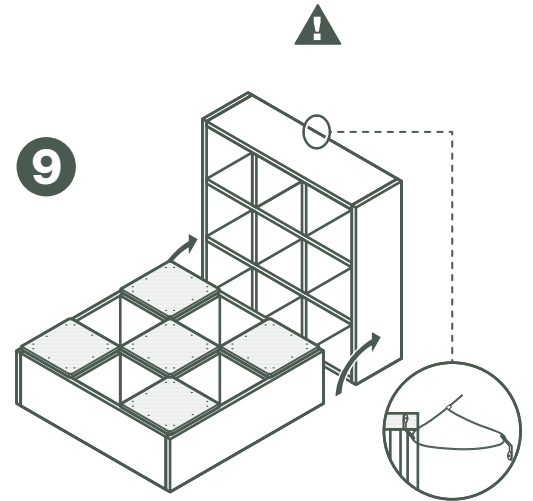

9 Tilt organizer upright and secure to wall using the included anti-tip hardware. Failure to secure to wall may create an unsafe tipping hazard.