



INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Floor Standing

PLANNING & PREPARATION

Use your order form to layout your uprights, shelves, and hardware in front of the location they will be installed. This will help to verify all of the items needed, as well as help to visualize the completed project.

INSTALLATION

Floor Standing Closets can be assembled either in place or assembled on the ground.

Assembling in place is easiest with two people to install. For spaces that have less than 90" of headroom, assembling in place is the only option. Assembling this way also only requires single components to be picked up at a time, making it the lighter installation method.

ASSEMBLED IN PLACE

- *Requires at least 2 people to install*
- *For areas with ceilings shorter than 90" high*
- *Single components installed at a time*
- *For smaller closets or closets without floor space*


Assembling on the ground and tilting into place requires ample headroom space (minimum of 90"). Assembling this way makes installing shelves on to the uprights easier with a single person, but can be heavy to tilt into place. The closet can be built in sections and tilted into place section by section, to keep the weight down.

ASSEMBLED ON GROUND

- *Can be assembled by one person*
- *Requires at least 90" of ceiling height for tipping up*
- *Will require tilting into place (can be heavy)*
- *For closets with ample floor space*

SHELVING HARDWARE


Before assembling the closet, open the shelf packs and prepare the shelves for installation to the uprights. Each Shelf Pack contains Plastic Cam Locks that are inserted into the bottom side of the shelves (A rubber mallet works great for installing these - gently tap in the plastic cam locks into shelving and set aside) & metal cam lock dowels that are screwed into the pre-drilled holes of the uprights using a Phillips head screwdriver.

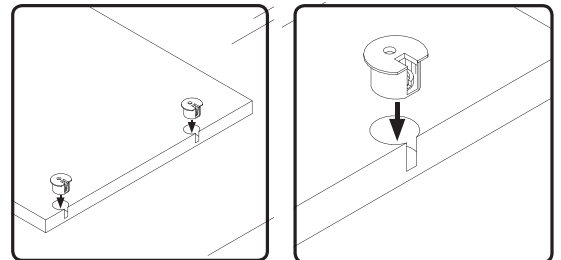


INSTALLING SHELVES

Install the metal cam lock dowels into the uprights at the locations where shelving will be installed (one common place is the top row of the predrilled holes in the uprights). Lower the shelves with installed cam locks onto the installed dowels on the uprights. Once seated, secure the shelves with a screw driver by turning the cam a half turn in the clockwise direction.

Tip: The Cam Locks are designed to be turned with the screw driver at a slight angle as to avoid hitting your knuckles on the upright.

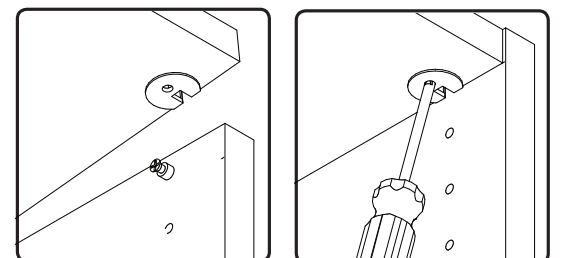


Once the uprights are up against the wall, secure every section to the wall using an L-bracket into a wall stud and on the top of the shelf, so the bracket is out of sight.

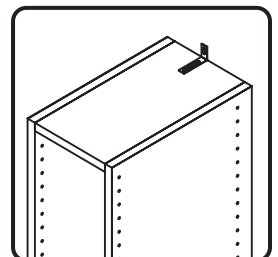

CUSTOM LENGTH SHELVING - If Applicable

Some of your shelving may need to be cut to a custom length in order to create a wall-to-wall closet solution. To create a smooth, clean cut on your shelves, apply painter's tape to the area you intend to cut & cut your shelves using a circular saw with a Laminate/Melamine blade (example skus 10"-252-6659, 7½"-252-6665). Once shelves are cut to the custom length, use L-brackets to attach the cut edge to the upright. These brackets are designed to attach to the pre-drilled holes in the closet uprights using the euro screws provided. Wood screws are also provided in the package to attach the L-bracket to the underside of your custom cut shelf.

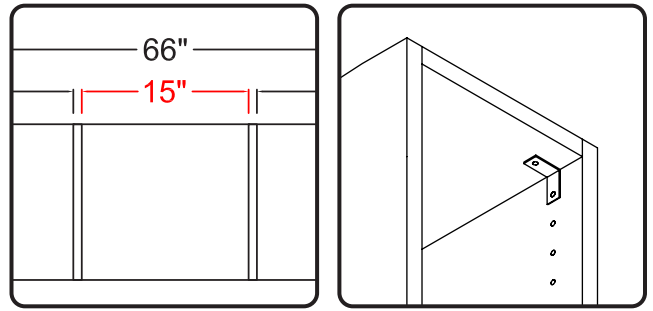


If you have wardrobe rods that require cutting in order to fit your design, the safest, most effective way to cut these steel rods is by hand with a hack saw.


CORNER BRACKETS - If Applicable

Corner Brackets come in a pack of 3 and are designed to attach shelves perpendicularly to each other. Each pack of corner brackets includes wood screws to install the brackets to one of the shelves prior to installing the shelf.

Attach the corner bracket using the supplied screws to the custom cut shelves on wall A. Next, install this shelf with the bracket attached, at the height of the adjacent shelf already installed on wall B to complete the corner.

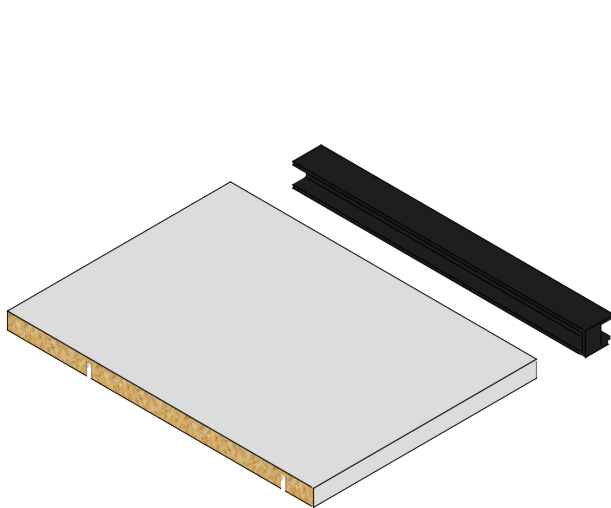

Step 1: Attach bracket to the custom cut shelf

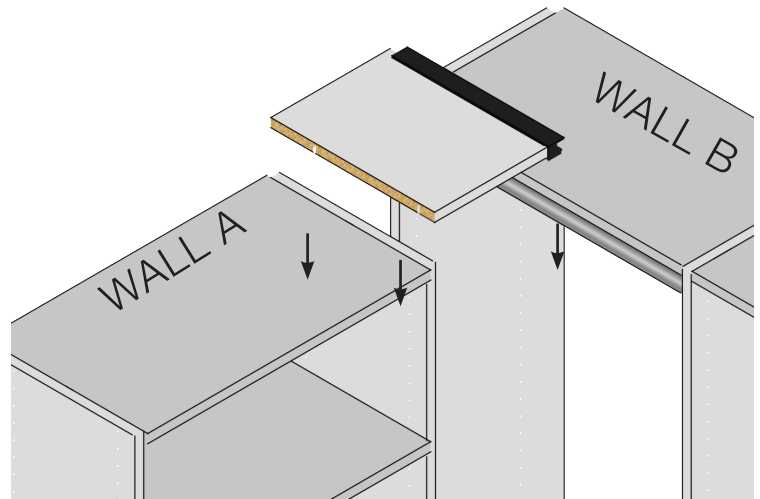

Step 2: Cam Lock the uncut side of the custom shelf, and use the corner bracket to clip into the adjacent shelf.