



INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Wall Mounted

HANG TRACK


Install the hang track into wall studs to securely mount the closet to the wall. Use #12 x 2-1/2" screws, these must be fastened to structural members in the wall (wood studs) to ensure proper installation.

- **Important: If the end of the hang track is more than 4" away from a stud, use a toggle bolt to safely secure the hang track to the wall. Toggle bolt not included.**
- For tracks that need to be cut-to-size, a chop saw suitable for cutting steel or a hack saw are recommended.

When a certain closet height is desired, the holes for the hang track will be 2-1/2" below the top of the closet. Use this to determine where to mount the hang track.

- *For Example, if the hang track is installed at 80", the top shelf will be at 82-1/2"*


*Install the hang track with the lips facing upwards.

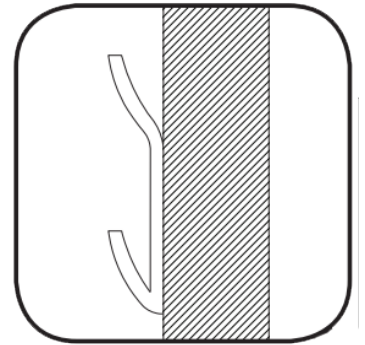

Note: Wall Mounted closets use 21", 41", and 61-1/4" uprights only. (86-1/2" is used for floor standing only)



ATTACHING UPRIGHT HANG BRACKETS TO UPRIGHTS

Next, attach the hang brackets onto the uprights. These are attached using the small euro screws included with your hang brackets. The brackets are attached to the uprights using the 2 pre-drilled holes next to the notch in the upright. The 'arm' on the hang bracket should face towards the notch. Only one hang bracket needs to be installed on an upright. Uprights that sit against your walls limit which side the hang brackets can be installed on the uprights.

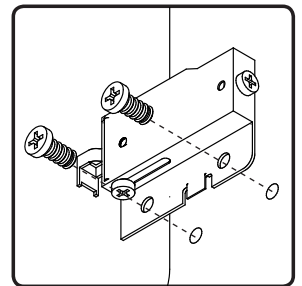

SHELVING HARDWARE

Before hanging the uprights onto the hang tracks, open the shelf packs and prepare the shelves for installation. Each Shelf Pack contains Plastic Cam Locks that are inserted into the bottom side of the shelves (*A rubber mallet works great for installing these - gently tap in the plastic cam locks into your shelving and set aside*) & metal cam lock dowels that

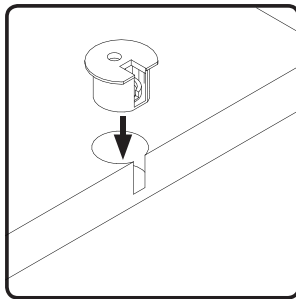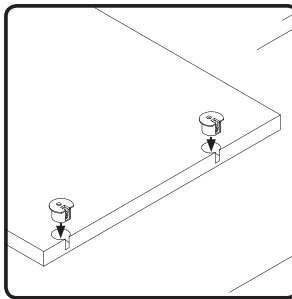



are screwed into the pre-drilled holes in the uprights using a Phillips head screwdriver.

Install the metal dowels into the uprights at the locations the shelves will be installed (one common place is the top row of pre-drilled holes in the uprights).

Installing the metal dowels into the


uprights prior to hanging the uprights onto the hang track is easier than when the uprights are 7' in the air! If you have drawers in the design, install drawer glides at this time as well.

Uprights are now ready to place on your hang track. Lift the uprights onto the center 'lip' of the hang track.

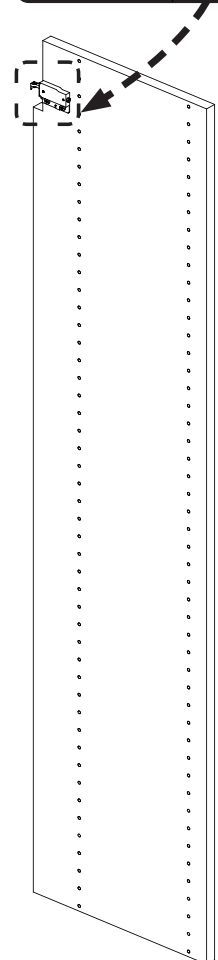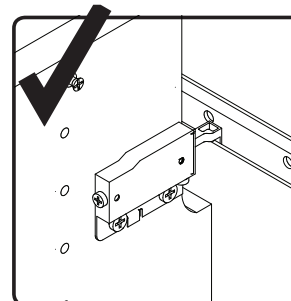

INSTALLING SHELVES

Shelving can now be installed onto the uprights. Lower the shelves with installed cam locks onto the installed dowels on the uprights. Once seated, secure the shelves with a screw driver by turning the cam a half turn in the clockwise direction.

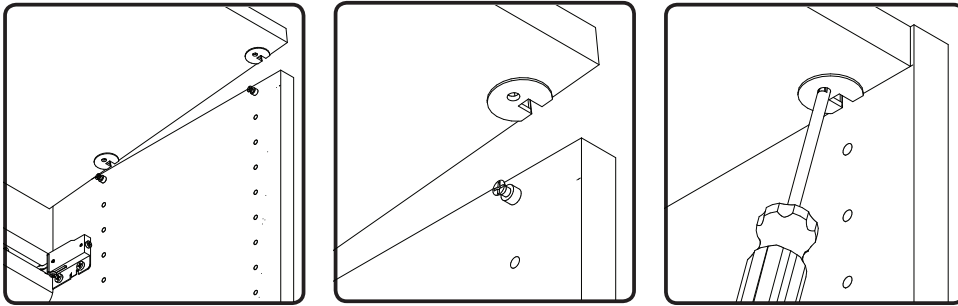


Tip: The Cam Locks are designed to be turned with the screw driver at a slight angle as to avoid hitting your knuckles on the upright.

CUSTOM LENGTH SHELVING - If Applicable


Some of your shelving may need to be cut to a custom length in order to create a wall-to-wall closet solution. To create a smooth, clean cut on your shelves, apply painter's tape to the area you intend to cut & cut your shelves using a circular saw with a Laminate/Melamine blade (example skus 10"-252-6659, 7½"-252-6665). Once shelves are cut to the custom length, use L-brackets to attach the cut edge to the upright. These brackets are designed to attach to the pre-drilled holes in the closet uprights using the euro screws provided. Wood screws are also provided in the package to attach the L-bracket to the underside of your custom cut shelf.

If you have wardrobe rods that require cutting in order to fit your design, the safest, most effective way to cut these steel rods is by hand with a hack saw.

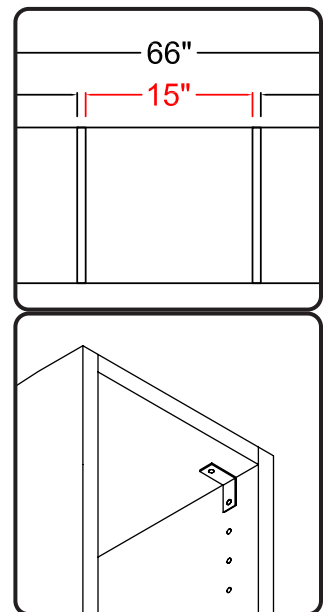


FINAL TOUCHES

Prior to installing drawers, doors, wardrobe rods, lights, or any other accessories, fine-tune your closet fit by turning the adjustment screws on the upright hang brackets.

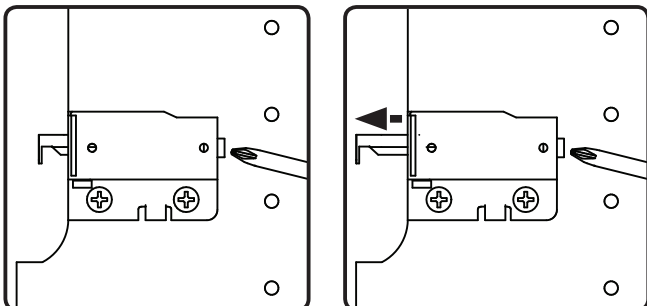

The back adjustment screw will push and pull the upright away from the wall. Adjust this screw till the upright is flush with the wall it rests on.

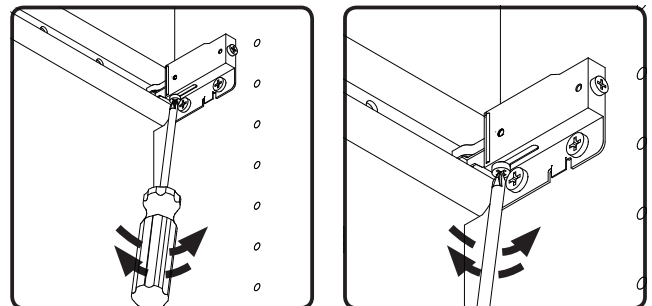


The bottom adjustment screw will raise and lower each upright. Adjust each of the upright hang brackets to level all the shelving in your closet. A level closet will make installing drawers and doors much easier to install.


CORNER BRACKETS - If Applicable

Corner Brackets come in a pack of 3 and are designed to attach shelves perpendicularly to each other. Each pack of corner brackets includes wood screws to install the brackets to one of the shelves prior to installing the shelf.

Attach the corner bracket using the supplied screws to the custom cut shelves on wall A. Next, install this shelf with the bracket attached, at the height of the adjacent shelf already installed on wall B to complete the corner.

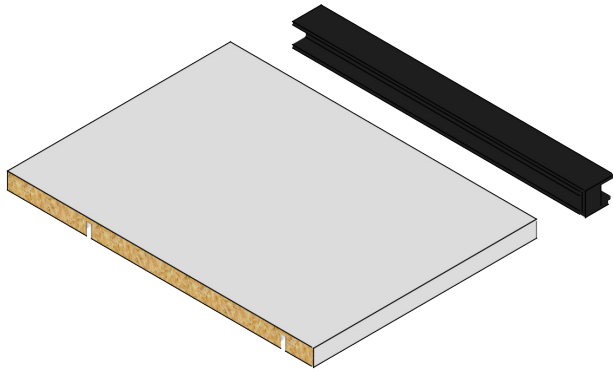

Step 1: Attach bracket to the custom cut shelf

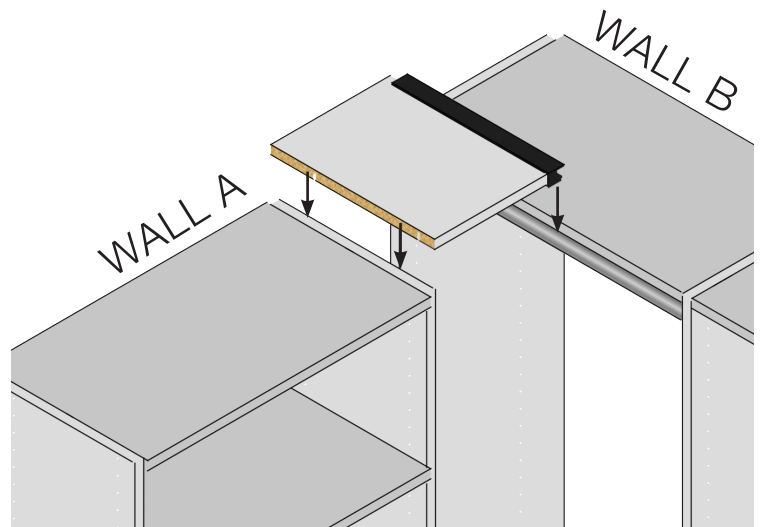

Step 2: Cam Lock the uncut side of the custom shelf, and use the corner bracket to clip into the adjacent shelf.