


DAKOTA™ CLOSETS SHELF PACK INSTRUCTIONS


STEP ONE

Using a screwdriver, install cam dowels into the upright at the desired location.

GOOD TO KNOW: Uprights are sold separately and are available in 21", 41", 61-1/4" and 86-1/2" heights.

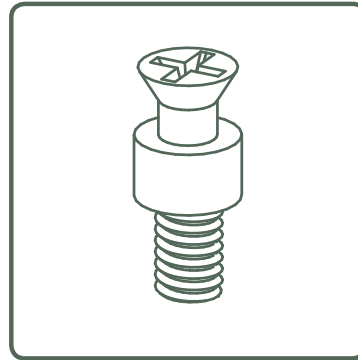


8 cam dowels are included in shelf pack

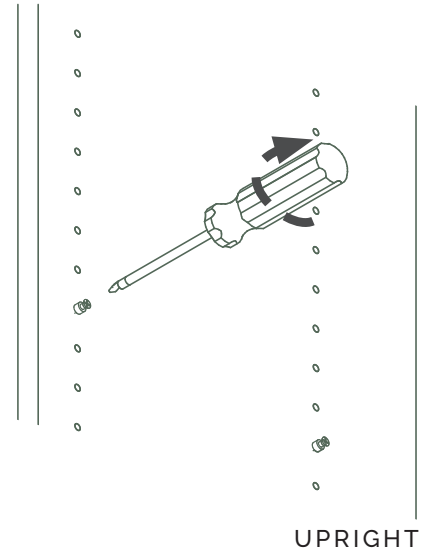


STEP TWO

Prepare shelves for installation. Install cam locks by pressing into the pre drilled holes on bottom face of shelf.


IMPORTANT: Cam locks cannot be removed once installed, ensure proper orientation. Refer to illustration below.

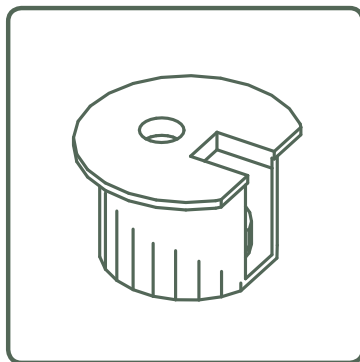

8 cam locks are included in shelf pack


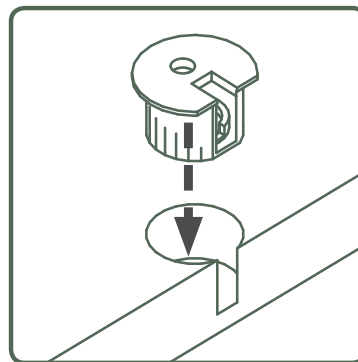


Line up the opening of the cam and shelf

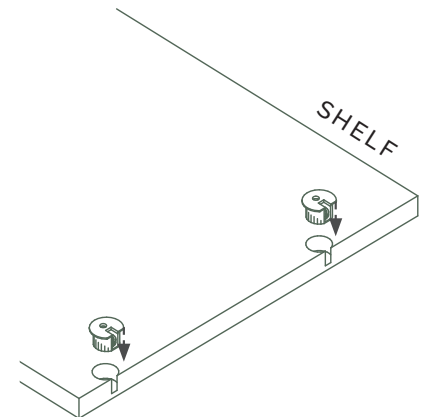

STEP 3

Lower the shelves onto the installed cam dowels. Lining up the opening of the camlock with the cam dowel.

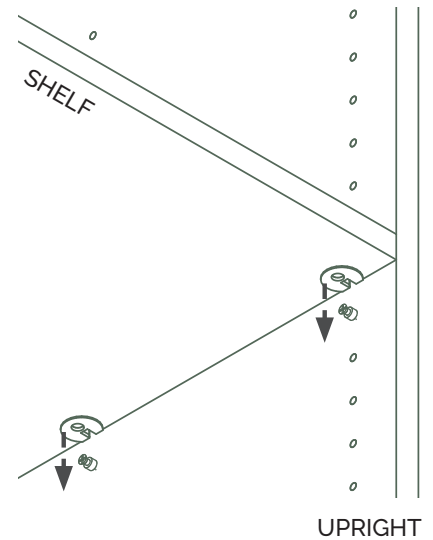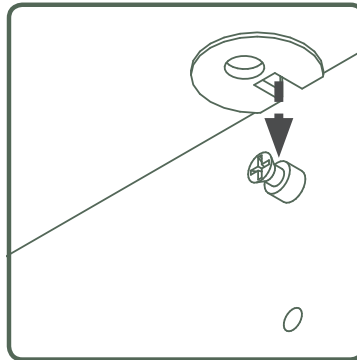

STEP 4

Using a screwdriver, lock the shelves in place by turning the cam lock a half turn in the clockwise direction.

The camlocks are designed for the screwdriver to be at a slight angle.

GOOD TO KNOW: Cam locks can be unlocked if the shelf needs to be moved. Simply turn the opposite direction to unlock cam from dowel.

