

DAKOTA™ VANITY INSTALLATION INSTRUCTIONS

SAFETY


Please read and understand manual before attempting to assemble, operate, or install the product.

WARNING

Vanity supports a maximum weight of 200 lbs. Exceeding the maximum weight limit will compromise the integrity of the cabinet structure and could cause the cabinet to fail.

WARNING & CAUTION

Failure to follow warnings and cautions could result in serious injury. Do not exceed the maximum load capacity. Do not stand on cabinet. Use cabinet on level ground.

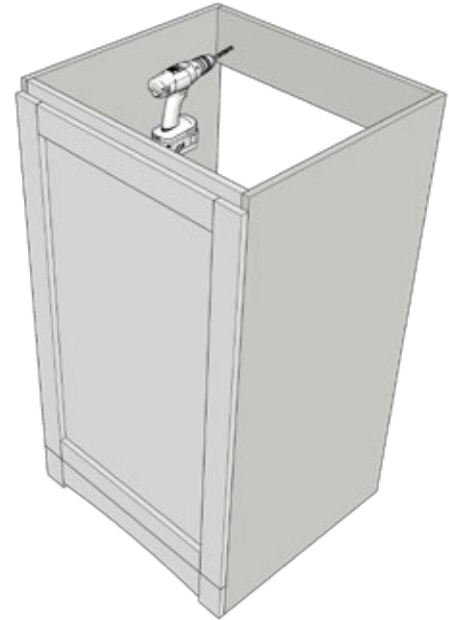

PREPARATION

ESTIMATED ASSEMBLY TIME

30 minutes

TOOLS REQUIRED FOR ASSEMBLY (not included):

#10x2-1/2" Installation Screws, Phillips Screwdriver, Drill with 3/32" bit, Marking Tool, Carpenter's Level, Tape Measure, Stud finder

WALL STUD LOCATION

Locate the Wall studs with a stud finder and mark where the vanity cabinet is to be installed.

STEP ONE - ATTACH TO WALL

Place your vanity cabinet into the desired position.

Drill through cabinet back braces into prelocated wall studs using a 3/32" diameter drill bit. Holes should come no closer than 2 inches from any inside edge.

Insert the installation screws into the holes and tighten securely. One screw should be placed into each vertical brace.


If only one wall stud is located inside of the desired location, install with 3 screws, one into wall stud, and 2 into drywall anchors (sold separately).

STEP TWO - INSTALL VANITY TOP

Follow the vanity top manufacturer's instructions for installation.

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag.

Attach water lines to faucet and connect the p-trap and drain (sold separately).

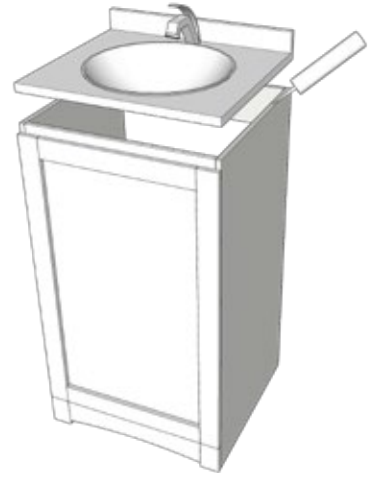

STEP THREE - CLEANING CARE

To clean surface of doors or cabinet, use non-abrasive cleaners and or cleaning agents that do not contain solvents.

Avoid using abrasive cleaners as they will damage the surface.

